



FOR USE ONLY WITH LISTED, LOW VOLTAGE LANDSCAPE LIGHTING POWER UNITS THAT DO NOT EXCEED 25 AMPS, 15 VOLT MAX.


WARNING: Luminaire must be installed in accordance with local codes and the National Electrical Code (NEC). Failure to do so may result in serious injury and/or damage to the luminaire.

WARNING CHILDREN: Lens and metal around the lamp can become hot enough to blister hands. Care should be taken not to locate luminaires where small children can reach them if 35 watt lamps or higher are used.

WARNING– RISK OF ELECTRIC SHOCK. INSTALL ALL LUMINAIRES 10 FEET (3.05 M) OR MORE FROM A POOL, SPA OR FOUNTAIN.

TOOLS REQUIRED FOR INSTALLATION:

- 3/32 Allen key (supplied)
- Heavy mallet/hammer
- Wire Stripper

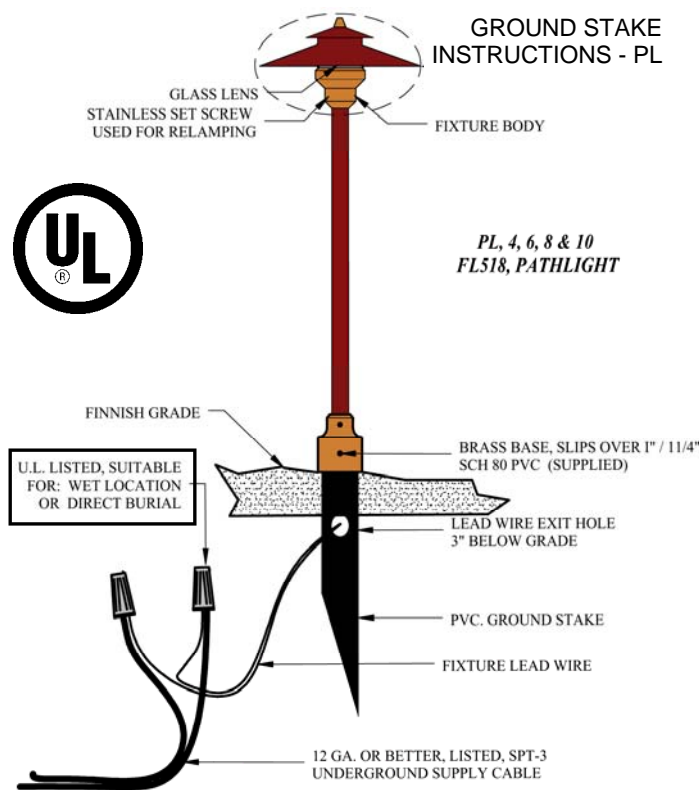


INSTALLATION INSTRUCTIONS FOR PL & FL SERIES PATH LIGHTS

1. To prevent electrical shock, disconnect transformer from electrical supply before service.
2. Pound plastic stake into soil leaving approximately 2" exposed above grade, stake should be plumb.
3. Thread the 18 ga. luminaire wire through the exit hole in the side of the stake as shown (see figure).
4. Slip brass fixture base over/into ground spike (see figure).
5. Separate the 2 conductor cable by pulling apart the ends approximately 10" strip ends 1/2" (see figure).
6. Connect luminaire leads to the main supply cable using UL listed connectors suitable for underground burial or wet location.
7. Small gauge cable is vulnerable to damage in the landscape; Protect by routing in close proximity to the luminaire or adjacent to concrete slab or similar structure. Do not bury more than 6" deep
8. Cut off any excess 18 ga luminaire wire within 6" of the base of the luminaire, slab or similar structure..
9. When splicing several 12 ga cables or any combination of 12 ga and larger cables, verify suitability of connector.
10. Power supply cable for connection to this luminaire shall be SPT-3 Underground Low Energy Cable and listed as such.

ADJUSTING LIGHT PERIMETER (PL4 / PL4B / PL5 / PL6 & PL6K / PL7 / PL8 / PL9/ PL10)

1. With top off, loosen inner set screw with provided Allen key.
2. Replace top.
3. Rotate top to adjust to desired light output.
4. Remove top without rotating.
5. Tighten inner set screw.

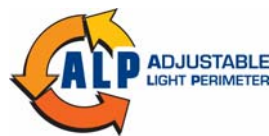

Factory default setting is four rotations up from the lowest position.

FOR QUESTIONS ON HOW TO OBTAIN THE PROPER CABLE OR CONNECTORS CALL TOLL FREE 877-942-1179

IMPORTANT SAFETY INSTRUCTIONS: LIGHTED LAMP IS HOT!!

WARNING: TO REDUCE THE RISK OF FIRE OR INJURY TO PERSONS:

1. Turn off / unplug and allow to cool before replacing lamp.
2. Lamps get **HOT** quickly! Contact only switch / plug when turning on.
3. Do not touch hot lens, guard or enclosure.
4. Keep lamp away from flammable materials.
5. Do not touch the lamp at any time. Use a soft cloth. Oil from skin may damage lamp.
6. Do not operate luminaire with a missing or damaged shield (cover).

SAVE THESE INSTRUCTIONS!

RELAMPING / SERVICE INSTRUCTIONS

1. To prevent electrical shock, disconnect transformer from electrical supply before service.
2. Using 3/32" hex key (provided) loosen set screw on luminaire body 2 turns (see figure) - do not remove set screw.
3. Remove complete top assembly with a twisting motion to expose lamp,; it is not necessary to disassemble top.
4. Replace lamp with correct wattage and type of lamp marked on luminaire label. (5W to 20W for PL & FL series).
5. Halogen lamps: **DO NOT** touch halogen lamp with bare hands. Position the lamp in the plastic wrapper so the pins protrude from one end. Using the plastic to protect the glass portion of the lamp gently insert pins into the socket, remove all plastic.

Replace top assembly promptly after installing lamp, use a twisting motion while pushing down, tighten set screw.