

# AURORALIGHT

## REQUIRED TOOLS:


3/32" Allen Key (Included)  
Wire Cutter / Stripper

## ARIEL INSTALL GUIDE

UDW428444

### INSTRUCTIONS:

1. To prevent electrical shock, disconnect transformer from electrical supply and make sure power supply is completely off before installation. Fixtures should always be installed by a licensed electrician.
2. Secure the **fixture** and **CAM-LOC W/SPOOL KIT & SPIKES** in the desired wet or dry location by driving the spikes into the landscape until the plate is flat on the surface.
3. Run the **2x 20AWG cable** to a dry location nearby. Separate the 2 internal conductors by stripping the large outer insulation first, then strip about 1/4" off the end of each individual conductor (see figure).
4. Neatly wrap any excess cable around the base of the **spool kit**. Leave enough slack at the **fixture** to allow it to still rotate (see figure).
5. Connect the **20AWG wires** to the **main supply cable** using **UL listed connectors** suitable for underground and wet location as well as the appropriate UL listed underground feeder (UF) cable (see figure).
6. For light aiming, loosen the **wing nut** and rotate the **fixture** in the desired direction. Tighten the **wing nut** down when finished (see figure).

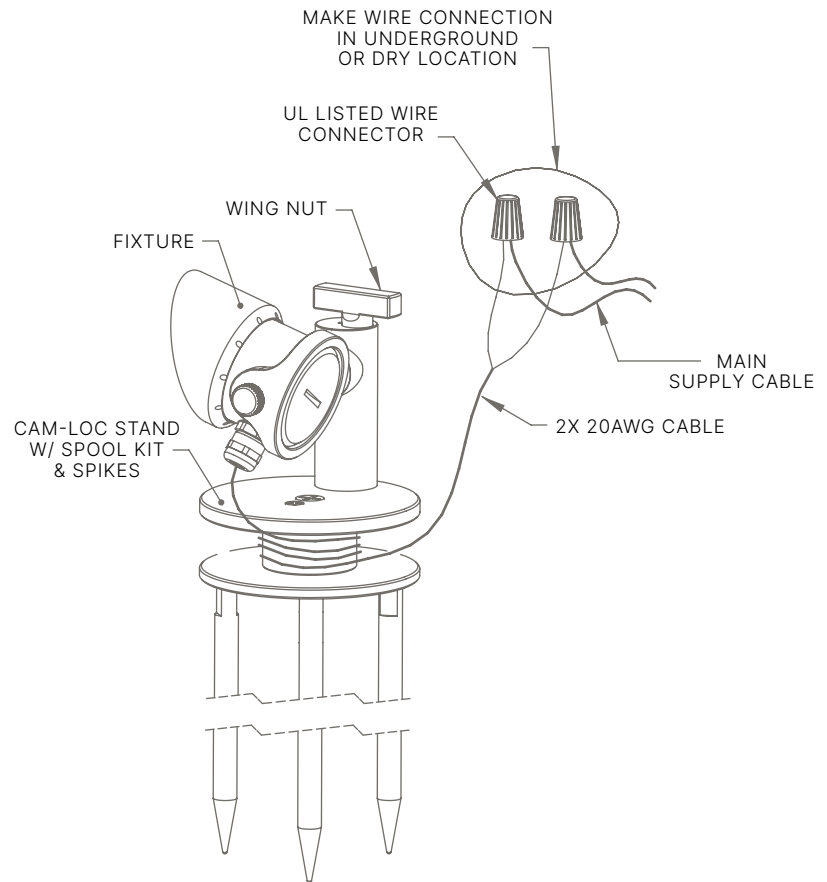

**Important!** This fixture is assembled and sealed at the factory, do not unscrew any of the pre-assembled caps or the cord seal. Doing so could result in leakage and failure.

P. 760.931.2910

E. techsupport@auroralight.com

O. 2742 Loker Ave. W Carlsbad CA 92010

W. www.auroralight.com

**WARNING:** Luminaire must be installed in accordance with local codes and the National Electrical Code (NEC). Failure to do so may result in serious injury and or damage to the luminaire.

**WARNING:** Risk of electric shock. Install per NEC Code 680.22(B (6), if listed low voltage luminaires are to be located near a pool, spa or fountain.