

# AURORALIGHT

## REQUIRED TOOLS:


3/32 Allen Key (Included)  
Heavy Mallet/Hammer  
Wire Cutter / Stripper

## LA JOLLA INSTALL GUIDE

PTA455306 / PTA455208, PTA455209

### INSTRUCTIONS:

1. To prevent electrical shock, disconnect transformer from electrical supply and make sure power supply is completely off before installation. Fixtures should always be installed by a licensed electrician.
2. Pound the **ground stake** fully into soil, stake should be plumb.
3. Loosen the **set screw** with the supplied Allen key and remove the **1/2" adapter** from the stem assembly. Screw the **1/2" adapter** into the **ground stake**, tighten down by hand.
4. Feed the **18GA lead wires** through the **ground stake** and out of **lead wire exit hole** (see figure).
5. Slide the **stem assembly** into the **1/2" adapter** until it fully stops. Tighten the **set screw** down to secure in place.
6. Slip the **fixture top** over the **stem assembly** and apply downward pressure until it stops to fully seat. Tighten down the **top set screw** with the supplied Allen key to secure it.
7. Separate the 2-conductor **18GA lead wires** by pulling apart the ends approximately 10". Strip about 1/2" of the insulation off the ends (see figure).
8. Connect the **18GA lead wires** to **12GA underground supply cable** using **UL listed connectors** suitable for underground burial or wet location (see figure for configuration).
9. **Underground supply cable** for power supply to this luminaire shall be **SPT-3 Underground Low Energy Cable** and listed as such (see figure).

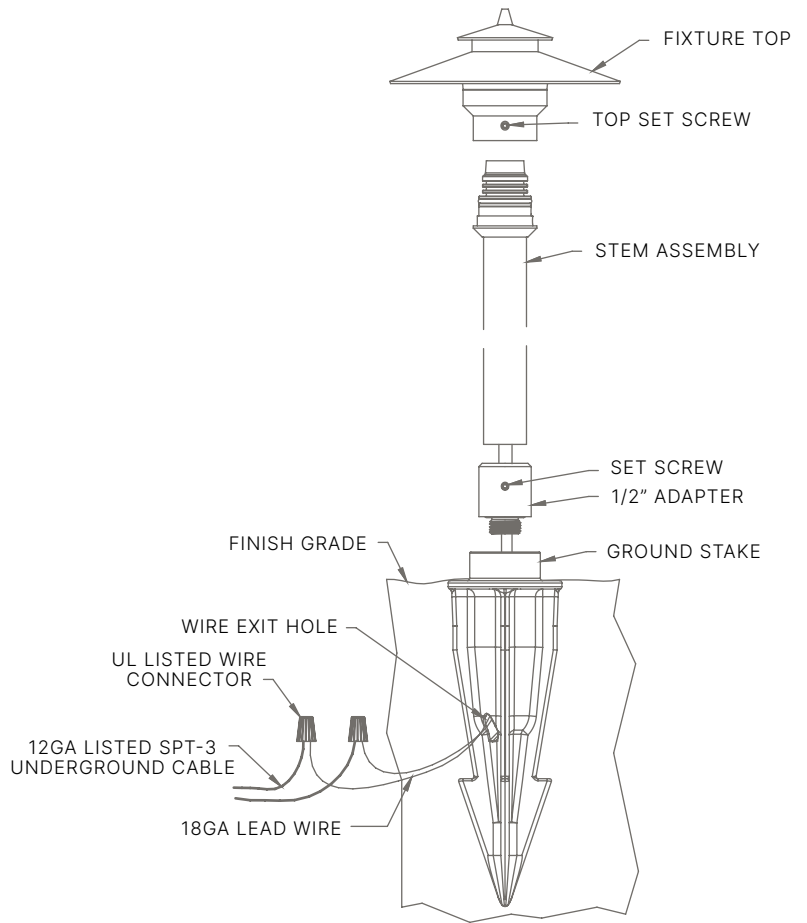

**TIP:** Small gauge cable is vulnerable to damage in the landscape; Protect by routing in close proximity to the luminaire or adjacent to concrete slab or similar structure. Do not bury more than 6" deep. Do not over tighten.

**WARNING:** Luminaire must be installed in accordance with local codes and the National Electrical Code (NEC). Failure to do so may result in serious injury and or damage to the luminaire.

**WARNING:** Risk of electric shock. Install per NEC Code 680.22(B) (6), if listed low voltage luminaires are to be located near a pool, spa or fountain.

P. 760.931.2910

E. techsupport@auroralight.com

O. 2742 Loker Ave. W Carlsbad CA 92010

W. www.auroralight.com