

AURORALIGHT

REQUIRED TOOLS:

Wire Cutter / Stripper
1-7/16" Hole Saw (wood) or Core Drill (masonry)
Phillips Head Screw Driver

MERIDIAN INSTALL GUIDE

RDL008102 / RDL008202

INSTRUCTIONS:

1. To prevent electrical shock, disconnect transformer from electrical supply and make sure power supply is completely off before installation. Fixtures should always be installed by a licensed electrician.
2. Prepare **1-7/16" up to 1-1/2" hole, 4" deep** in desired location.
3. Slide the **fixture module** out of the **housing** and disconnect the **module lead wires** at the **Wago wire connector**. Set the **fixture module** aside. If installing a **1/2" conduit adapter** into the back of the housing, remove **black plug** and thread it in.
4. Pull the **main supply cable** through the prepared **hole** and strip insulation off the ends. Separate the 2-conductor **fixture lead wire** by pulling apart the ends to the desired length and strip about **1/2"** of the insulation off (see figure).
5. Connect the **main supply cable** to the **fixture lead wire** using **UL listed wire connectors** suitable for the location.

For Wood Installation:


6. Insert the **housing** into the **hole** and screw down using the provided **#6 wood screws** (a **1/16"** pilot hole for the screws is recommended). Reconnect the **module lead wires** and slide the **fixture module** into the **housing** until it stops.

For Concrete or Tile Installation:

6. Drill **pilot holes** for the provided anchors and use the **#6 wood screws** to screw down the **housing**. Reconnect the **module lead wires** and slide the **fixture module** into the **housing** until it stops.

For Landscape Installation:

6. Place **housing** in prepared hole. Fill the hole around the **housing** until secured in place. Reconnect **module lead wires** and slide **fixture module** into **housing** until it stops.

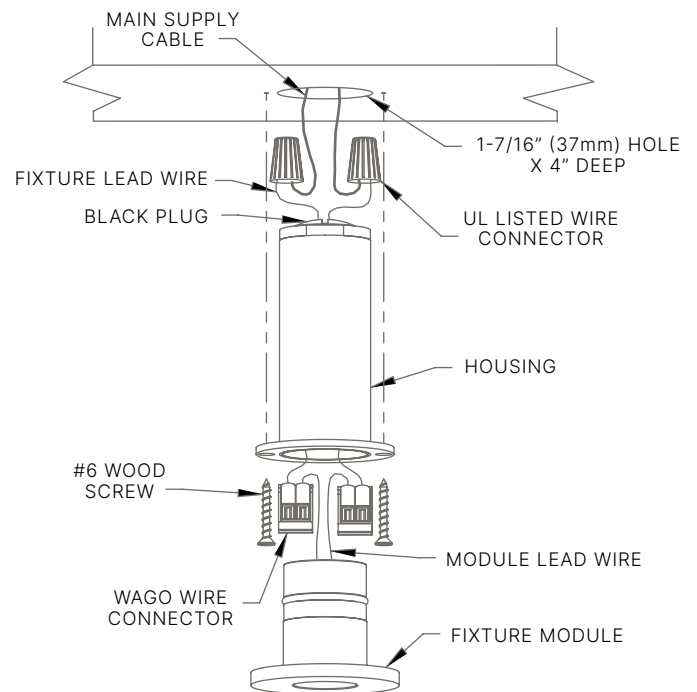

TIP: Small gauge cable is vulnerable to damage in the landscape; protect by routing in close proximity to the luminaire or adjacent to concrete slab or similar structure. Do not bury more than 6" deep. Do not over tighten.

P. 760.931.2910

E. techsupport@auroralight.com

O. 2742 Loker Ave. W Carlsbad CA 92010

W. www.auroralight.com

WARNING: Luminaire must be installed in accordance with local codes and the National Electrical Code (NEC). Failure to do so may result in serious injury and or damage to the luminaire.

WARNING: Risk of electric shock. Install per NEC Code 680.22(B (6), if listed low voltage luminaires are to be located near a pool, spa or fountain.