

# AURORALIGHT

## REQUIRED TOOLS:


Wire Cutter / Stripper  
Adjustable Wrench - 1" Capacity

## TAOS INSTALL GUIDE

RPD110144 / RPD110244 / RPD110344 / RPD110451

### INSTRUCTIONS:

1. To prevent electrical shock, disconnect transformer from electrical supply and make sure power supply is completely off before installation. Fixtures should always be installed by a licensed electrician.
2. Secure the **mount** in the desired location.
3. Strip the outer insulation off the end of the 2-conductor **fixture lead wire** to separate them, then strip about ¼" of insulation off each conductor.
4. Unscrew the ½" **adapter**, leaving the **fixture lead wire** running through it (see figure).
5. Pull the **main supply cable** through the **mount** and connect it to the **fixture lead wire** using **UL listed wire connectors** suitable for the location (see figure).
6. Neatly return the connected wires back through the **mount** then screw the ½" **adapter** into the **mount**. Use an adjustable wrench to tighten it down.
7. Screw the fixture back into the ½" **adapter** and tighten down firmly by hand to ensure it is securely attached.

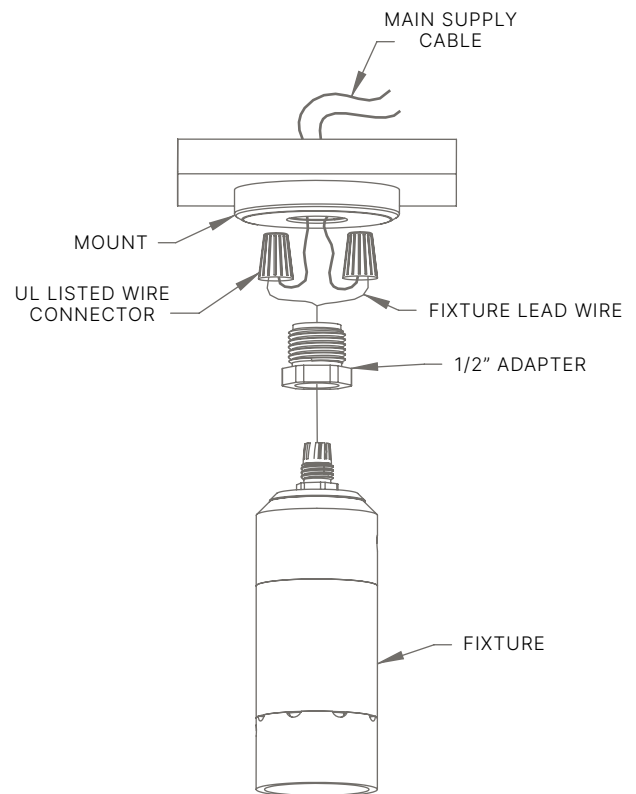

P. 760.931.2910

E. techsupport@auroralight.com

O. 2742 Loker Ave. W Carlsbad CA 92010

W. www.auroralight.com

**WARNING:** Luminaire must be installed in accordance with local codes and the National Electrical Code (NEC). Failure to do so may result in serious injury and or damage to the luminaire.

**WARNING:** Risk of electric shock. Install per NEC Code 680.22(B) (6), if listed low voltage luminaires are to be located near a pool, spa or fountain.