

AURORALIGHT

REQUIRED TOOLS:


Wire Cutter / Stripper
Adjustable Wrench - 1" Capacity

TAOS INSTALL GUIDE

RPD110144 / RPD110244 / RPD110344 / RPD110451

INSTRUCTIONS:

1. To prevent electrical shock, disconnect transformer from electrical supply and make sure power supply is completely off before installation. Fixtures should always be installed by a licensed electrician.
2. Secure the **mount** in the desired location.
3. Strip the outer insulation off the end of the 2-conductor **fixture lead wire** to separate them, then strip about 1/4" of insulation off each conductor.
4. Unscrew the 1/2" **adapter**, leaving the **fixture lead wire** running through it (see figure).
5. Pull the **main supply cable** through the **mount** and connect it to the **fixture lead wire** using **UL listed wire connectors** suitable for the location (see figure).
6. Neatly return the connected wires back through the **mount** then screw the 1/2" **adapter** into the **mount**. Use an adjustable wrench to tighten it down.
7. Screw the fixture back into the 1/2" **adapter** and tighten down firmly by hand to ensure it is securely attached.

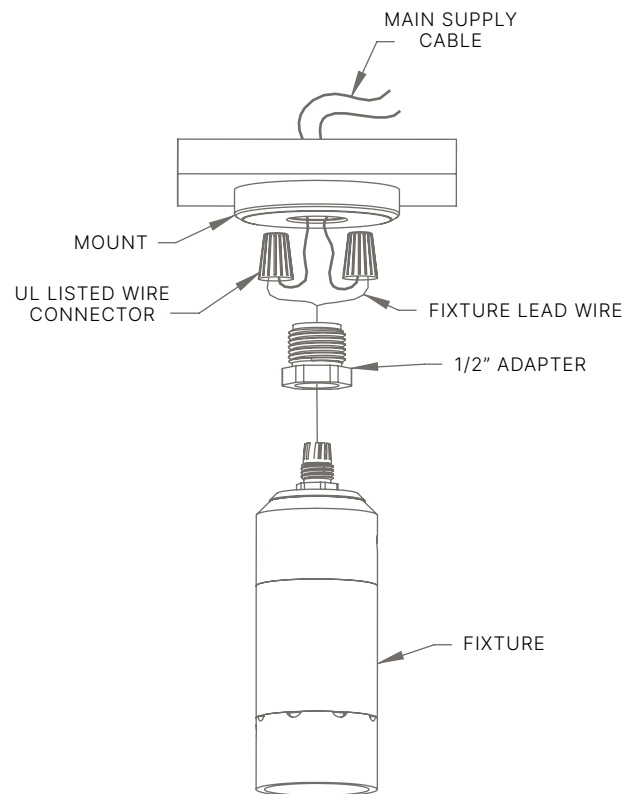

P. 760.931.2910

E. techsupport@auroralight.com

O. 2742 Loker Ave. W Carlsbad CA 92010

W. www.auroralight.com

WARNING: Luminaire must be installed in accordance with local codes and the National Electrical Code (NEC). Failure to do so may result in serious injury and or damage to the luminaire.

WARNING: Risk of electric shock. Install per NEC Code 680.22(B) (6), if listed low voltage luminaires are to be located near a pool, spa or fountain.