

# AURORALIGHT

## REQUIRED TOOLS:


3/32" Allen Key (Included)  
Wire Cutter / Stripper

## TAOS INSTALL GUIDE

UDW110144

### INSTRUCTIONS:

1. To prevent electrical shock, disconnect transformer from electrical supply and make sure power supply is completely off before installation. Fixtures should always be installed by a licensed electrician.
2. Place the fixture with **CAM-LOC stand** in the desired wet or dry location.
3. Run the **2x 20AWG cable** to a dry location nearby. Separate the 2 internal conductors by stripping the large outer insulation first, then strip about 1/4" off the end of each individual conductor (see figure).
4. Connect the **20AWG wires** to the **main supply cable** using **UL listed connectors** suitable for underground and wet location as well as the appropriate UL listed underground feeder (UF) cable (see figure).
5. For light aiming, loosen the **wing nut** and rotate the **fixture** in the desired direction. Tighten the **wing nut** down when finished (see figure).

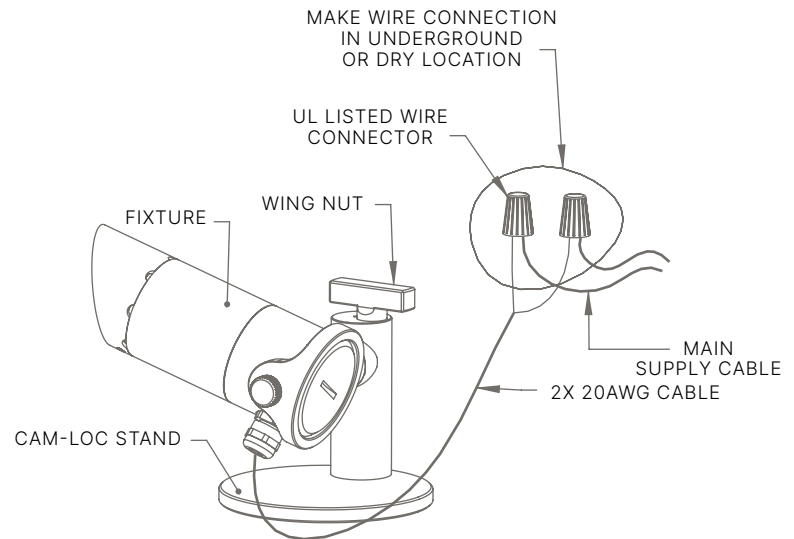

**Important!** This fixture is assembled and sealed at the factory, do not unscrew any of the pre-assembled caps or the cord seal. Doing so could result in leakage and failure.

P. 760.931.2910

E. techsupport@auroralight.com

O. 2742 Loker Ave. W Carlsbad CA 92010

W. www.auroralight.com

**WARNING:** Luminaire must be installed in accordance with local codes and the National Electrical Code (NEC). Failure to do so may result in serious injury and or damage to the luminaire.

**WARNING:** Risk of electric shock. Install per NEC Code 680.22(B (6), if listed low voltage luminaires are to be located near a pool, spa or fountain.